SONY

## DSC-S2000/S2100

**GB** Digital Still Camera/Instruction Manual

ES Cámara fotografía digital/Manual de instrucciones



# Cyber-shot

© 2010 Sony Corporation

GB

ES

### **English**

#### Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. DSC-S2000/S2100 Serial No.

## WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

#### For Customers in the U.S.A.

UL is an internationally recognized safety organization. The UL Mark on the product means it has been UL Listed.

If you have any questions about this product, you may call:

Sony Customer Information Center

1-800-222-SONY (7669)

The number below is for the FCC related matters only.

#### Regulatory Information

#### **Declaration of Conformity**

Trade Name: SONY

Model No.: DSC-S2000

Responsible Party: Sony Electronics Inc.

Address:16530 Via Esprillo, San Diego, CA 92127 U.S.A. Telephone No.: 858-942-2230

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **Declaration of Conformity**

Trade Name: SONY Model No.: DSC-S2100

Responsible Party: Sony Electronics Inc.

Address:16530 Via Esprillo, San Diego, CA 92127 U.S.A. Telephone No.: 858-942-2230

This device complies with Part15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### | CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

## For Customers in Europe

#### Notice for the customers in the countries applying EU Directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9.8 feet).

#### Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

#### Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

#### Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product,

please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

#### GB

## Disposal of waste batteries (applicable in the European Union and other European countries with separate collection systems)



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent

potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely.

Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## **Table of contents**

Ge	tting started	
	Refer to "Cyber-shot Handbook" (PDF) on supplied CD-ROM	7
	Checking the accessories supplied	7
	Identifying partsInserting the batteries/a memory card (sold separately) Setting the clock	11
Sh	ooting/viewing images	_
	Shooting still images	
	Shooting movies	
"C	yber-shot Handbook" (PDF)	_
	Learning more about the camera ("Cyber-shot Handbook")	19
Otl	hers	
	List of icons displayed on the screen	20
	Number of still images and recordable time of movies	22
	Precautions	23
	Specifications	25

# Refer to "Cyber-shot Handbook" (PDF) on supplied CD-ROM

For details on advanced operations, please read "Cybershot Handbook" (PDF) on the CD-ROM (supplied) using a computer.



Refer to "Cyber-shot Handbook" for in-depth instructions on shooting or viewing images and connecting the camera to your computer or printer (page 19).

## Checking the accessories supplied

- LR6 (size AA) alkaline batteries (2)
- Dedicated USB cable (1) (Sony Corporation 1-837-597-)
- Wrist strap (1)
- CD-ROM (1)
  - Cyber-shot application software
  - "Cyber-shot Handbook"
- Instruction Manual (this manual) (1)

## Notes on using the camera

#### Changing the language setting

The screen language can be changed if necessary.

To change the language setting, press the MENU button, then select

#### Internal memory and memory card back up

Do not turn off the camera, remove the batteries, or remove the memory card while the access lamp is lit. Otherwise, the internal memory data or the memory card may be damaged. Be sure to make a backup copy to protect your data.

GB

#### Notes on recording/playback

- To ensure stable operations of the memory card, we recommend that you use
  this camera to format any memory card being used with this camera for the
  first time. Note that formatting will erase all data recorded on the memory
  card. This data cannot be restored. Be sure to back-up any important data to a
  PC or other storage location.
- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splash-proof, nor water-proof. Read "Precautions" (page 23) before operating the camera.
- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. Otherwise, the camera may not properly record or play back images.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera.
- Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.
- Clean the flash surface before use. The heat of flash emission may cause dirt
  on the flash surface to become discolored or to stick to the flash surface,
  resulting in insufficient light emission.

#### Notes on the LCD screen and lens

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.
- When the battery level becomes low, the lens might stop moving. Insert new batteries or charged Nickel-Metal Hydride batteries and turn on the camera again.

#### On camera's temperature

Your camera and battery may get warm due to continuous use, but it is not a malfunction.

#### On image data compatibility

- The camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Sony does not guarantee that the camera will play back images recorded or
  edited with other equipment, or that other equipment will play back images
  recorded with the camera.

#### Warning on copyright


Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

#### No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

GB

## **Identifying parts**

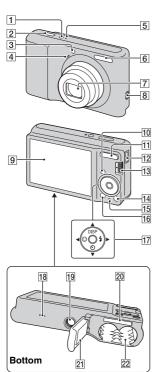

- 1 ON/OFF (Power) button
- 2 Shutter button
- 3 Self-timer lamp/Smile Shutter lamp
- 4 Microphone
  - 5 ON/OFF (Power) lamp
  - 6 Flash
- 7 Lens
- 8 (USB) jack
- 9 LCD screen
- 10 (Playback) button
- 11 For shooting: W/T (Zoom) button
  For viewing: Q (Playback

zoom) button/ [ (Index) button

- 12 Hook for wrist strap
- 13 Mode switch
- 14 m (Delete) button
- 15 Access lamp
- 16 MENU button
- TO Control button

  MENU on: ▲/▼/◀/►/●

  MENU off: DISP/⑤/ⓒ/‡
- 18 Buzzer
- 19 Tripod receptacle
- Use a tripod with a screw less than 5.5 mm (7/32 inches) long.
   Otherwise, you cannot firmly secure the camera, and damage to the camera may occur.
- 20 Memory card slot
- 21 Battery/Memory card cover
- 22 Batteries insertion slot

1 Open the cover.



2 Insert a memory card (sold separately).

With the notched corner down as illustrated, insert the memory card until it clicks into place.

Note the notched corner facing the correct direction



3 Match +/- and insert the batteries.



GB

## 4 Close the cover.



Make sure that the access lamp is not lit, then push the memory card

#### Memory card that you can use

The following memory cards are compatible with this camera: "Memory Stick PRO Duo" media, "Memory Stick PRO-HG Duo" media, "Memory Stick Duo" media, SD memory card and SDHC memory card. MultiMediaCard cannot be used.

In this manual, the term "Memory Stick Duo" media is used to refer to "Memory Stick PRO Duo" media, "Memory Stick PRO-HG Duo" media and "Memory Stick Duo" media.

When recording movies, it is recommended that you use the following memory cards:

- MEMORY STICK PRO DUO ("Memory Stick PRO Duo" media)
- MEMORY STICK PRO-HE DUD ("Memory Stick PRO-HG Duo" media)
- SD memory card or SDHC memory card (Class 2 or faster)

For details on the number of images/time that can be recorded, see page 22.

in once

### ■ To remove the memory card





Access lamp

#### Note

Never open the battery/memory card cover or remove the batteries/memory card
when the access lamp is lit. This may cause damage to data in the memory card/
internal memory.

#### When there is no memory card inserted

Images are stored in the camera's internal memory (approximately 6 MB). To copy images from the internal memory to a memory card, insert a memory card in the camera, then select MENU  $\rightarrow \bigoplus$  (Settings)  $\rightarrow \bigoplus$  (Memory Card Tool)  $\rightarrow$  [Copy].


#### Batteries you can and cannot use with your camera

GB

Battery type	Supplied	Supported	Rechargeable
LR6 (size AA) alkaline batteries	0	0	-
HR 15/51:HR6 (size AA) Nickel- Metal Hydride batteries	-	0	0
ZR6 (size AA) Oxy Nickel Primary batteries	-	0	-
Lithium batteries*	-	-	-
Manganese batteries*	-	-	-
Ni-Cd batteries*	-	-	_

<sup>\*</sup> Operating performance cannot be ensured if voltage drops or other problems are caused by the nature of the battery.

#### ■ To remove the batteries



Be sure not to drop the batteries.

#### Checking the remaining battery time

A remaining-charge indicator appears on the LCD screen.



#### Notes

- The remaining-charge indicator may not be correct under certain circumstances.
- When [Power Save] is set to [Standard] or [Stamina], if you do not operate the camera for a certain period of time while the power is on, the LCD screen becomes dark, then the camera turns off automatically (Auto power-off function).
- The supplied alkaline battery is for trial use only. You may need to purchase an additional battery for regular camera use.

#### Battery life and number of still images you can record/view

		Battery life (min.)	No. of Images
DSC-S2100	Recording	Approx. 85	Approx. 170
D3C-32100	Viewing	Approx. 370	Approx. 7400
DSC-S2000	Recording	Approx. 95	Approx. 190
D30-32000	Viewing	Approx. 540	Approx. 10800

#### Notes

 The number of still images that can be recorded is based on the CIPA standard, and is for shooting under the following conditions.


(CIPA: Camera & Imaging Products Association)

- [SteadyShot] is set to [Off].
- DISP (Screen Display Settings) is set to [Normal].
- Shooting once every 30 seconds.
- The zoom is switched alternately between the W and T ends.
- The flash strobes once every two times.
- The power turns on and off once every ten times.
- New batteries are used at an ambient temperature of 25°C (77°F).
- Using Sony "Memory Stick PRO Duo" media (sold separately).
- The values shown for alkaline battery are based on commercial norms, and do not
  apply to all alkaline batteries in all conditions. The values may vary, depending on
  the battery manufacturer/type, environmental conditions, product setting, etc.

## Setting the clock


1 Press the ON/OFF (Power) button.

The camera is turned on.



2 Select a setting item with ▲/▼ on the control button, then press ●.

**Date & Time Format:** Selects the date and time display format. **Date & Time:** Sets the date and time.




GB

- 3 Set the numeric value with **△**/**▼**/**⋖**/**▶**, then press **●**.
  - Midnight is indicated as 12:00 AM, and noon as 12:00 PM.
- 4 Select [OK], then press ●.

#### Setting the date and time again

Press the MENU button, then select  $\stackrel{\bullet}{\Longrightarrow}$  (Settings)  $\rightarrow$  4 (Clock Settings).

## Shooting still images




- 2 Hold the camera steady as illustrated.
  - Press the T button to zoom in, W button to zoom out.



3 Press the shutter button halfway down to focus.

When the image is in focus, a beep sounds and the ● indicator lights.

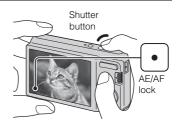


4 Press the shutter button fully down.



## **Shooting movies**

1 Set the mode switch to 聞 (Movie), then press ON/OFF (Power) button.



2 Press the shutter button fully down to start recording.



3 Press the shutter button fully down again to stop recording.

## Viewing images

1 Press the ► (Playback) button.

The last image shot is displayed.



### ■ Selecting next/previous image


Select an image with ▶ (next)/◀ (previous) on the control button.

• Press • in the center of the control button to view movies.

### ■ Deleting an image

- 1 Press (Delete) button.
- ② Select [This Image] with ▲ on the control button, then press 

  .

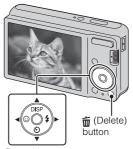

Control button

## ■ Returning to shooting images

Press the shutter button halfway down.

## ■ Turning off the camera

Press ON/OFF (Power) button.

# Learning more about the camera ("Cyber-shot Handbook")

"Cyber-shot Handbook", which explains how to use the camera in detail, is included on the CD-ROM (supplied). Refer to it for in-depth instructions on the many functions of the camera.

#### **■** For Windows users

- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
- 2 Click [Cyber-shot Handbook].

3 Start "Cyber-shot Handbook" from the shortcut on the desktop.


#### ■ For Macintosh users

- 1 Turn on your computer, and insert the CD-ROM (supplied) into the CD-ROM drive.
- 2 Select the [Handbook] folder and copy "Handbook.pdf" stored in the [GB] folder to your computer.
- 3 After copying is complete, double-click "Handbook.pdf".

GB


## List of icons displayed on the screen

#### When shooting still images



• The icons are limited in **EASY** (Easy Mode).

#### When shooting movies



1

Display	Indication
<b>4777</b>	Battery remaining
	Low battery warning
4:3 12M 4:3 10M	Image size
<b>&amp;</b> %	Scene Selection
i <b>O</b>	Camera mode (Intelligent Auto Adjustment, Program Auto, Movie Mode)
<b>&amp;</b>	Scene Recognition icon
4	White balance
•	Metering Mode
	SteadyShot

Display	Indication
( <b>4</b> )	Vibration warning
	Smile Detection Sensitivity indicator
x1.4 sQ PQ	Zoom scaling

2

Display	Indication
•	AE/AF lock
ISO400	ISO number
125	Shutter speed
F3.5	Aperture value
+2.0EV	Exposure Value
[]	AF range finder frame indicator
Standby	Recording a movie/ Standby a movie
0:12	Recording time (m:s)

Display	Indication
102	Recording folder
96	Number of recordable images
100Min	Recordable time
·	Recording/Playback Media (memory card, internal memory)
<b>③</b>	Red-eye reduction
<b>③</b>	Flash mode
4.	Flash charging

## 4

3

Display	Indication
Display	maication
<b>⊗</b> 10	Self-timer
[●] FOFF	Face Detection
	Burst
г ¬	AF range finder frame
+	Spot metering cross- hairs

## Number of still images and recordable time of movies

## ■ Still images

DSC-S2100

(Units: Images)

Capacity	Internal memory	Memory	lemory card formatted with this camera			
Size	Approx. 6 MB	2 GB	4 GB	8 GB	16 GB	32 GB
12M	1	395	790	1600	3200	6400
8M	1	580	1170	2350	4700	9400
5M	2	710	1420	2900	5850	11700
VGA	28	9650	19300	38600	77200	154400
16:9(9M)	1	533	1060	2150	4300	8600
16:9(2M)	5	1800	3700	7500	15000	30000

#### DSC-S2000

(Units: Images)

Capacity	Internal memory	Memory card formatted with this camera				ımera
Size	Approx. 6 MB	2 GB	4 GB	8 GB	16 GB	32 GB
10M	1	470	940	1900	3800	7600
5M	2	710	1420	2900	5850	11700
VGA	28	9650	19300	38600	77200	154400
16:9(7M)	1	600	1200	2450	5000	10000
16:9(2M)	5	1800	3700	7500	15000	30000

#### Notes

- The number of still images may vary depending on the shooting conditions and the recording media.
- When the number of remaining shootable images is greater than 99,999, the ">99999" indicator appears.
- 6B When an image shot with other cameras is played back on this camera, the image may not appear in the actual image size.

(Units: hour: minute: second)

#### Movies

The table below shows the approximate maximum recording times. These are the total times for all movie files.

Capacity	Internal memory	Memory card formatted with this camera				
Size	Approx. 6 MB	2 GB	4 GB	8 GB	16 GB	32 GB
VGA	0:00:03	0:27:20	0:54:40	1:49:20	3:38:40	7:17:20
QVGA	0:00:10	1:23:40	2:45:00	5:35:00	11:18:00	22:36:00

#### Notes

- The recordable movie file size is up to approx. 2 GB for each file. If the file size reaches approx. 2 GB, the camera stops recording the movie automatically.
- The recording time may vary depending on the shooting conditions and the recording media.
- The camera does not support HD recordings or playbacks for movies.

## **Precautions**

#### Do not use/store the camera in the following places

- In an extremely hot, cold or humid place In places such as in a car parked in the sun, the camera body may become deformed and this may cause a malfunction.
- · Under direct sunlight or near a heater The camera body may become discolored or deformed, and this may cause a malfunction.
- · In a location subject to rocking vibration
- Near strong magnetic place
- · In sandy or dusty places

Be careful not to let sand or dust get into the camera. This may cause the camera to malfunction, and in some cases this malfunction cannot be repaired.

#### On carrying

Do not sit down in a chair or other place with the camera in the back pocket of your trousers or skirt, as this may cause malfunction or damage the camera.

GB

#### On the battery

- Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping or stepping on the battery.
- · Do not use a deformed or damaged battery.
- Do not mix a used battery together with a new battery or different types of batteries.
- Remove the batteries from the camera when you do not operate the camera for long periods, or when the batteries are dead.

#### On cleaning

#### Cleaning the LCD screen

Wipe the screen surface with an LCD cleaning kit (sold separately) to remove fingerprints, dust, etc.

#### Cleaning the lens

Wipe the lens with a soft cloth to remove fingerprints, dust, etc.

#### Cleaning the camera surface

Clean the camera surface with a soft cloth slightly moistened with water, then wipe the surface with a dry cloth. To prevent damage to the finish or casing:

- Do not expose the camera to chemical products such as thinner, benzine, alcohol, disposable cloths, insect repellent, sunscreen or insecticide.
- Do not touch the camera with any of the above on your hand.
- Do not leave the camera in contact with rubber or vinyl for a long time.

#### On operating temperatures

Your camera is designed for use under the temperatures between 0°C and 40°C (32°F and 104°F). Shooting in extremely cold or hot places that exceed this range is not recommended

#### On the internal rechargeable backup battery

This camera has an internal rechargeable battery for maintaining the date and time and other settings regardless of whether the power is on or off.

This rechargeable battery is continually charged as long as you are using the camera. However, if you use the camera for only short periods, it discharges gradually, and if you do not use the camera at all for about one month it becomes completely discharged. In this case, be sure to charge this rechargeable battery before using the camera.

However, even if this rechargeable battery is not charged, you can still use the camera, but the date and time will not be indicated.

#### Charging method of the internal rechargeable backup battery

Insert batteries with enough power remaining in the camera, and then leave the camera for 24 hours or more with the power off.

## **Specifications**

#### Camera

#### [System]

Image device:

DSC-S2100: 7.79 mm (1/2.3 type) R, G, B primary color mosaic

filters

DSC-S2000: 7.70 mm (1/2.3 type) R, G, B primary color mosaic

filters

Total pixel number of camera:

DSC-S2100: Approx. 12.4 Megapixels

DSC-S2000: Approx.

10.3 Megapixels

Effective pixel number of camera:

DSC-S2100: Approx.

12.1 Megapixels

DSC-S2000: Approx.

10.1 Megapixels

Lens: 3× zoom lens

f = 6.2 mm - 18.6 mm (35 mm - 105 mm (35 mm film equivalent)) F3.1 (W) - F5.6 (T)

Exposure control: Automatic exposure, Scene Selection (8 modes)

White balance: Automatic, Daylight, Cloudy, Fluorescent 1/2/3,

Incandescent, Flash

Recording interval for Burst mode: Approx. 1 second

File format:

Still images: JPEG (DCF Ver. 2.0, Exif Ver. 2.21, MPF Baseline) compliant, DPOF compatible Movies: AVI (Motion JPEG)

Recording media: Internal Memory (approx. 6 MB), "Memory Stick Duo" media, SD memory card, SDHC memory card

Flash: Flash range (ISO sensitivity (Recommended exposure Index) set to Auto):

Approx. 0.5 m to 3.3 m (1 feet 7 3/4 inches to 10 feet 10 inches) (W)/

approx. 0.5 m to 1.8 m (1 feet 7 3/4 inches to 5 feet 10 7/8 inches) (T)

#### [Input and Output connectors]

USB communication: Hi-Speed USB (USB 2.0 compliant)

#### [LCD screen]

LCD panel:

DSC-S2100: 7.5 cm (3.0 type) DSC-S2000: 6.2 cm (2.5 type)

TFT drive

Total number of dots: 230 400 (960 × 240) dots

#### [Power, general]

Power: LR6 (size AA) Alkaline batteries (2), 3 V HR15/51:HR6 (size AA) Nickel-Metal Hydride batteries (2) (sold separately), 2.4 V ZR6 (size AA) Oxy Nickel Primary Battery (2) (sold separately), 3 V

Power consumption (during shooting): 1.0 W

Operating temperature: 0°C to 40°C (32°F to 104°F)

Storage temperature: -20°C to +60°C  $(-4^{\circ}F \text{ to } +140^{\circ}F)$ 

Dimensions:  $97.6 \times 61.0 \times 27.2 \text{ mm}$  $(3.7/8 \times 2.1/2 \times 1.1/8 \text{ inches})$ (W/H/D, excluding protrusions) Mass:

DSC-S2100: Approx. 184 g (6.5 oz)DSC-S2000: Approx. 173 g (6.1 oz)(including two batteries and memory card) Microphone: Monaural

Buzzer Exif Print: Compatible

PRINT Image Matching III: Compatible PictBridge: Compatible

Design and specifications are subject to change without notice.

#### **Trademarks**

· The following marks are trademarks of Sony Corporation.

Cyber-shot, "Cyber-shot," "Memory Stick," , "Memory Stick PRO." MEMORY STICK PRO. "Memory Stick Duo,"

MEMORY STICK DUD, "Memory Stick PRO Duo," MEMORY STICK PRO Duo, "Memory

Stick PRO-HG Duo," MEMORY STICK PRO-HG Dug, "Memory Stick Micro," "MagicGate,"

#### MAGICGATE

- · Microsoft, Windows, DirectX and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- · Macintosh and Mac OS are trademarks or registered trademarks of Apple Inc.
- · Intel, and Pentium are trademarks or registered trademarks of Intel Corporation.
- · SDHC Logo is a trademark.



- · MultiMediaCard is a trademark of the MultiMediaCard Association.
- · Adobe and Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- · In addition, system and product names used in this manual are, in general, trademarks or registered trademarks of their respective developers or manufacturers. However, the TM or ® marks are not used in all cases in this manual.

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

#### http://www.sony.net/

Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

GB

## Español

Nombre del producto: Cámara Digital

Modelo: DSC-S2000/S2100

POR FAVOR LEA DETALLADAMENTE ESTE MANUAL DE INSTRUCCIONES ANTES DE CONECTAR Y OPERAR ESTE EOUIPO.

RECUERDE QUE UN MAL USO DE SU APARATO PODRÍA ANULAR LA GARANTÍA.

#### **AVISO**

Para reducir el riesgo de incendio o descarga eléctrica, no exponga la unidad a la lluvia ni a la humedad.

## Atención para los clientes en Europa

## Aviso para los clientes de países en los que se aplican las directivas de la UE

El fabricante de este producto es Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075, Japón. El representante autorizado en lo referente al cumplimiento de la directiva EMC y a la seguridad de los productos es Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Alemania. Para resolver cualquier asunto relacionado con el soporte técnico o la garantía, consulte las direcciones que se indican en los documentos de soporte técnico y garantía suministrados por separado.

Este producto se ha probado y cumple con la normativa que establece la Directiva EMC si se utiliza un cable de conexión de menos de 3 metros de longitud.

#### Atención

Los campos electromagnéticos a frecuencias específicas podrán influir en la imagen y el sonido de esta unidad.

#### | Aviso

Si la electricidad estática o el electromagnetismo interrumpen la transmisión de datos (fallo), reinicie la aplicación o desconecte el cable de comunicación (USB, etc.) y vuelva a conectarlo.

#### I Tratamiento de los equipos eléctricos y electrónicos al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de recogida selectiva de residuos)



Este símbolo en el equipo o el embalaje indica que el presente producto no puede ser tratado como residuos domésticos normales, sino que debe entregarse en el correspondiente punto de recogida de equipos eléctricos y electrónicos. Al asegurarse de que este producto se desecha correctamente, Ud. ayuda a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de este producto. El reciclaje de materiales ayuda a conservar los recursos naturales. Para recibir

información detallada sobre el reciclaje de este producto, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

#### I Tratamiento de las baterías al final de su vida útil (aplicable en la Unión Europea y en países europeos con sistemas de recogida selectiva de residuos)



Este símbolo en la batería o en el embalaje indica que la batería proporcionada con este producto no puede ser tratada como un residuo doméstico normal.

En algunas baterías este símbolo puede utilizarse en combinación con el símbolo químico. El símbolo químico del mercurio (Hg) o del plomo (Pb) se añadirá si la batería contiene más del 0,0005% de mercurio o del

0,004% de plomo.

Al asegurarse de que estas baterías se desechan correctamente, Ud. ayuda a prevenir las consecuencias negativas para el medio ambiente y la salud humana que podrían derivarse de la incorrecta manipulación en el momento de deshacerse de la batería. El reciclaje de materiales ayuda a conservar los recursos naturales.

En el caso de productos que por razones de seguridad, rendimiento o mantenimiento de datos, sea necesaria una conexión permanente con la batería incorporada, esta batería solo deberá ser reemplazada por personal técnico cualificado para ello. Para asegurarse de que la batería será tratada correctamente, entregue el producto al final de su vida útil en un punto de recogida para el reciclado de aparatos eléctricos y electrónicos.

Para las demás baterías, vea la sección donde se indica cómo quitar la batería del producto de forma segura.

Deposite la batería en el correspondiente punto de recogida para el reciclado. Para recibir información detallada sobre el reciclaje de este producto o de la batería, póngase en contacto con el ayuntamiento, el punto de recogida más cercano o el establecimiento donde ha adquirido el producto.

## Índice

Pre	eparativos	
	Consulte la "Guía práctica de Cyber-shot" (PDF) en el CD-ROM suministrado	5
	Comprobación de los accesorios suministrados	5
	Notas sobre la utilización de la cámara	5
	Identificación de las partes	8
	Inserción de las pilas/una tarjeta de memoria	
	(se vende por separado)	
	Ajuste del reloj	13
То	ma/visionado de imágenes	
	Toma de imágenes fijas	14
	Toma de películas	15
	Visualización de imágenes	16
"G	uía práctica de Cyber-shot" (PDF)	
	Para saber más sobre la cámara	
	("Guía práctica de Cyber-shot")	17
Otr	'OS	
	Lista de iconos visualizados en la pantalla	18
	Número de imágenes fijas y tiempo grabable	
	de películas	20
	Precauciones	21
	Especificaciones	23

#### ES

## Consulte la "Guía práctica de Cybershot" (PDF) en el CD-ROM suministrado

Para más detalles sobre las operaciones avanzadas, lea la "Guía práctica de Cyber-shot" (PDF) en el CD-ROM (suministrado) utilizando un ordenador.
Consulte la "Guía práctica de Cyber-shot" para ver instrucciones más detalladas sobre la toma o visionado de imágenes y la conexión de la cámara a su ordenador o impresora (página 17).

## Comprobación de los accesorios suministrados

- Baterías alcalinas LR6 (tamaño AA) (2)
- Cable USB exclusivo (1) (Sony Corporation 1-837-597-)
- Correa para muñeca (1)
- CD-ROM (1)
  - Software de aplicación del Cyber-shot
  - "Guía práctica de Cyber-shot"
- Manual de instrucciones (este manual) (1)

## Notas sobre la utilización de la cámara

## Cambio del ajuste de idioma

El idioma de pantalla se puede cambiar si es necesario.

Para cambiar el ajuste de idioma, pulse el botón MENU, después seleccione

(Ajustes) → 

(Tajustes principales) → [Language Setting].

#### Copia de seguridad de la memoria interna y tarjeta de memoria

No apague la cámara, extraiga las pilas, ni retire la tarjeta de memoria mientras está encendida la lámpara de acceso. De lo contrario, podrán dañarse los datos de la memoria interna o la tarjeta de memoria. Asegúrese de hacer una copia de seguridad para proteger sus datos.

#### Notas sobre la grabación/reproducción

- Para asegurar operaciones correctas de la tarjeta de memoria, le recomendamos que utilice esta cámara para formatear cualquier tarjeta de memoria que vaya a utilizar con esta cámara por primera vez. Tenga en cuenta que al formatear se borrarán todos los datos grabados en la tarjeta de memoria. Estos datos no se pueden recuperar. Asegúrese de hacer una copia de seguridad de cualquier dato importante en un PC u otro lugar de almacenaie.
- Antes de comenzar a grabar, haga una grabación a modo de prueba para asegurarse de que la cámara está funcionando correctamente.
- La cámara no está hecha a prueba de polvo, ni a prueba de salpicaduras, ni a prueba de agua. Lea "Precauciones" (página 21) antes de utilizar la cámara.
- Evite exponer la cámara al agua. Si entra agua dentro de la cámara, podrá ocurrir un mal funcionamiento. En algunos casos, la cámara no podrá ser reparada.
- No dirija la cámara hacia el sol ni hacia otras luces intensas. Podrá ocasionar un mal funcionamiento de la cámara.
- No utilice la cámara cerca de un lugar que genere ondas de radio fuertes o emita radiación. De lo contrario, es posible que la cámara no pueda grabar o reproducir imágenes correctamente.
- La utilización de la cámara en lugares arenosos o polvorientos podrá ocasionar un mal funcionamiento
- Si se produce condensación de humedad, elimínela antes de utilizar la cámara.
- No agite ni golpee la cámara. Podría ocasionar un mal funcionamiento y no poder grabar imágenes. Además, el soporte de grabación podría quedar inutilizable o dañarse los datos de imagen.
- Limpie la superficie del flash antes de utilizarlo. El calor de la emisión del flash podrá hacer que la suciedad en la superficie del flash se descolore o se adhiera en ella, ocasionando una insuficiente emisión de luz.

#### Notas sobre la pantalla LCD y el objetivo

- La pantalla LCD está fabricada utilizando tecnología de muy alta precisión
  por lo que más del 99,99% de los píxeles son operativos para uso efectivo.
  Sin embargo, es posible que aparezcan algunos puntos diminutos negros y/o
  brillantes (blancos, rojos, azules o verdes) en la pantalla LCD. Estos puntos
  son un resultado normal del proceso de fabricación, y no afectan a la
  grabación.
- Cuando el nivel de la batería sea bajo, es posible que el objetivo deje de moverse. Inserte pilas nuevas o pilas de níkel e hidruro metálico cargadas y encienda la cámara otra vez.

#### Acerca de la temperatura de la cámara

 $_{\rm ES}$  La cámara y la batería pueden calentarse debido a una utilización continua,  ${f 6}$  pero esto no es un defecto de funcionamiento.

#### Acerca de la compatibilidad de los datos de imagen

- La cámara cumple con la norma universal DCF (Design rule for Camera File system) establecida por la JEITA (Japan Electronics and Information Technology Industries Association).
- Sony no garantiza que la cámara pueda reproducir imágenes grabadas o editadas con otro equipo, ni que otros equipos puedan reproducir imágenes grabadas con la cámara.


#### Aviso sobre los derechos de autor

Los programas de televisión, películas, cintas de vídeo y demás materiales pueden estar protegidos por copyright. La grabación no autorizada de tales materiales puede ir en contra de los artículos de las leyes de copyright.

No hay compensación por daño del contenido o fallo de grabación Sony no compensará por no poder grabar o por la pérdida o daño del contenido grabado debido a un mal funcionamiento de la cámara o el soporte de grabación, etc.

ES

## Identificación de las partes

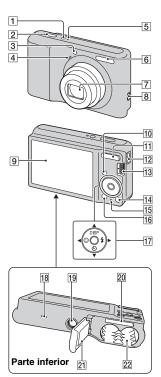

- 1 Botón ON/OFF (Alimentación)
- 2 Botón del disparador
- 3 Lámpara de autodisparador/ Lámpara de Captador de sonrisas
- 4 Micrófono
- Lámpara ON/OFF (Alimentación)
- 6 Flash
- 7 Objetivo
- 8 Toma ← (USB)
- 9 Pantalla LCD
- 10 Botón ▶ (Reproducción)
- Para tomar imagen: Botón W/T (Zoom)

Para visionado: Botón Q (Zoom de reproducción)/Botón █
(Índice)

- 12 Gancho para correa de muñeca
- 13 Conmutador de modo
- 14 Botón i (Eliminar)
- 15 Lámpara de acceso
- 16 Botón MENU
- 17 Botón de control

  MENU activado: ▲/▼/◀/▶/●

  MENU desactivado: DISP/ॐ/

  ⓒ// \$
- 18 Zumbador
- 19 Rosca para trípode
- Utilice un trípode con un tornillo de menos de 5,5 mm de largo. De lo contrario, no podrá sujetar firmemente la cámara, y es posible que la cámara se dañe.
- 20 Ranura de tarjeta de memoria
- 21 Tapa de las pilas/tarjeta de memoria
- 22 Ranura de inserción de las pilas

# Inserción de las pilas/una tarjeta de memoria (se vende por separado)

1 Abra la tapa.



2 Inserte una tarjeta de memoria (se vende por separado).

Con la esquina cortada hacia abajo como se muestra en la ilustración, inserte la tarjeta de memoria hasta que encaje en su sitio con un chasquido.





3 Haga coincidir +/- e inserte las pilas.



## 4 Cierre la tapa.



#### ■ Tarjeta de memoria que puede utilizar


Las siguientes tarjetas de memoria son compatibles con esta cámara: "Memory Stick PRO Duo", "Memory Stick PRO-HG Duo", "Memory Stick Duo", tarjeta de memoria SD y tarjeta de memoria SDHC. La MultiMediaCard no se puede utilizar. En este manual, el término "Memory Stick Duo" se utiliza para referirse a "Memory Stick PRO Duo", "Memory Stick PRO-HG Duo" y "Memory Stick Duo".

Cuando grabe películas, se recomienda que utilice las tarjetas de memoria siguientes:

- MEMORY STICK PRO DUO ("Memory Stick PRO Duo")
- MEMORY STICK PRO-HG DUO ("Memory Stick PRO-HG Duo")
- Tarjeta de memoria SD o tarjeta de memoria SDHC (Clase 2 ó más rápida)

Para más detalles sobre el número de imágenes/tiempo que se pueden grabar, consulte la página 20.

#### Para extraer la tarjeta de memoria

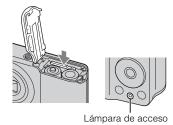

Asegúrese de que la lámpara de acceso no está encendida, después empuje hacia dentro la tarjeta de memoria una vez...

#### Nota

 No abra nunca la tapa de las pilas/tarjeta de memoria ni extraiga las pilas/tarjeta de memoria cuando la lámpara de acceso esté encendida. Esto podría ocasionar daño a los datos en la tarjeta de memoria/memoria interna.

## ES

#### Cuando no hay tarjeta de memoria insertada

Las imágenes se almacenan en la memoria interna de la cámara (aproximadamente 6 MB)


Para copiar imágenes de la memoria interna a una tarjeta de memoria, inserte una tarjeta de memoria en la cámara, después seleccione MENU → (Ajustes) → (Her tarjeta memoria) → [Copiar].

## Pilas que puede y que no puede utilizar con su cámara

Tipo de pilas	Suministrado	Admitidas	Recargables
Pilas alcalinas LR6 (tamaño AA)	0	0	-
Pilas de níkel e hidruro metálico HR 15/51:HR6 (tamaño AA)	ı	0	0
Pilas primarias de óxido de níkel ZR6 (tamaño AA)	-	0	-
Baterías de litio*	_	-	-
Baterías de manganeso*	_	-	-
Pilas de níkel cadmio*	-	-	-

<sup>\*</sup> El rendimiento operativo no se puede asegurar si la tensión cae o se producen otros problemas debido a la naturaleza de las pilas.

## ■ Para extraer las pilas





#### Comprobación del tiempo de pilas restante

Aparece un indicador de carga restante en la pantalla LCD.



#### Notas

- Es posible que el indicador de carga restante no sea correcto en ciertas circunstancias.
- Cuando [Ahorro de energía] está ajustado a [Estándar] o [Estamina], si no utiliza la cámara durante un cierto periodo de tiempo mientras está conectada la alimentación, la pantalla LCD se oscurecerá, después la cámara se apagará automáticamente (Función de apagado automático).
- Las pilas alcalinas suministradas son para uso como prueba solamente. Es posible que necesite comprar otras pilas para uso regular de la cámara.

## Duración de las pilas y número de imágenes fijas que se pueden grabar/ver

	Durac (n		N°. de Imágenes	
DSC-S2100	Grabación	Aprox. 85	Aprox. 170	
D3C-32100	Visionado	Aprox. 370	Aprox. 7400	
DSC-S2000	Grabación	Aprox. 95	Aprox. 190	
D3C-32000	Visionado	Aprox. 540	Aprox. 10800	


#### Notas

- El número de imágenes fijas que se pueden grabar está basado en el estándar CIPA, y es para tomar imágenes en las condiciones siguientes. (CIPA: Camera & Imaging Products Association)
  - [SteadyShot] está ajustado a [Desactivar].
  - DISP (Ajustes de visualización en pantalla) está ajustado a [Normal].
  - Tomando una imagen cada 30 s (segundo)
  - Se cambia el zoom alternativamente entre los extremos W y T.
  - El flash destella una de cada dos veces.
  - La alimentación se activa y desactiva una vez cada diez veces.
  - Se utilizan pilas nuevas a una temperatura ambiente de 25 °C
  - Utilización de "Memory Stick PRO Duo" de Sony (se vende por separado).
- Los valores mostrados para pilas alcalinas están basados en normas comerciales, y
  no son aplicables a todas las pilas alcalinas en todas las condiciones. Es posible
  que los valores varíen dependiendo del fabricante/tipo de pilas, condiciones
  ambientales, ajustes del producto, etc.

## Ajuste del reloj

1 Pulse el botón ON/OFF (Alimentación).

La cámara se enciende.



Format fecha y hora: Selecciona el formato de visualización de fecha y hora.

**Fecha y hora:** Establece la fecha y hora.



ES

- 3 Ajuste el valor numérico con  $\blacktriangle/\blacktriangledown/\blacktriangleleft/\blacktriangleright$ , después pulse ●.
  - Medianoche se indica como 12:00 AM, y mediodía como 12:00 PM.
- 4 Seleccione [OK], y después pulse ●.

#### Ajuste de la fecha y la hora otra vez

## Toma de imágenes fijas

1 Ajuste el conmutador de modo a (Imagen fija), después pulse el botón ON/OFF (Alimentación).



- 2 Sujete la cámara sin moverla como se muestra en la ilustración.
  - Pulse el botón T para acercar con zoom, y el botón W para alejar con zoom.



3 Pulse el botón del disparador hasta la mitad para enfocar.

Cuando la imagen está enfocada, suena un pitido y se ilumina el indicador ●.



4 Pulse el botón del disparador a fondo.



## Toma de películas

 Ajuste el conmutador de modo a 間 (Película), después pulse el botón ON/OFF (Alimentación).



2 Pulse el botón del disparador a fondo para iniciar la grabación.



3 Pulse el botón del disparador a fondo otra vez para detener la grabación.

## Visualización de imágenes

1 Pulse el botón ► (Reproducción).

Se visualiza la última imagen tomada.



## Selección de la imagen siguiente/anterior

Seleccione una imagen con ▶ (siguiente)/

- ◀ (anterior) del botón de control.
- Pulse en el centro del botón de control para ver películas.

## ■ Eliminación de una imagen

- ① Pulse el botón 🗹 (Eliminar).
- Seleccione [Esta ima] con ▲ del botón de control, después pulse ●.



Botón de control

## Para volver a la toma de imágenes

Pulse el botón del disparador hasta la mitad.

#### Para apagar la cámara

Pulse el botón ON/OFF (Alimentación).

# Para saber más sobre la cámara ("Guía práctica de Cyber-shot")

La "Guía práctica de Cyber-shot", que explica cómo utilizar la cámara en detalle, está incluida en el CD-ROM (suministrado). Consúltela para ver instrucciones exhaustivas sobre las muchas funciones de la cámara.

#### Para usuarios de Windows

- 1 Encienda su ordenador e inserte el CD-ROM (suministrado) en la unidad de CD-ROM.
- 2 Haga clic en [Guía práctica de Cyber-shot].
- 3 Inicie la "Guía práctica de Cyber-shot" desde el acceso directo del escritorio.


#### Para usuarios de Macintosh

- 1 Encienda su ordenador e inserte el CD-ROM (suministrado) en la unidad de CD-ROM.
- 2 Seleccione la carpeta [Handbook] y copie el "Handbook.pdf" almacenado en la carpeta [ES] a su ordenador.
- 3 Después de haberse completado el copiado, haga doble clic en "Handbook.pdf".

ES


# Lista de iconos visualizados en la pantalla

## Cuando se toman imágenes fijas



 Los iconos están limitados en EASY (Modo fácil).

## Cuando se toman películas



1

Visualización	Indicación
	Batería restante
	Aviso de poca batería
4:3 12M 4:3 10M	Tamaño de imagen
<b>≜</b> °	Selección de escena
i <b>O</b>	Modo cámara (Ajuste automát. inteligente, Programa automático, Modo película)
<b>≜</b> °	Icono de Reconocimiento de escena

Visualización	Indicación
4	Balance del blanco
•	Modo de medición
(( <b>4</b> ))	SteadyShot
(( <b>4</b> )))	Aviso de vibración
[ <b>9</b> ]	Indicador de sensibilidad de detección de sonrisas
x1,4 sQ PQ	Relación del zoom

2

Visualización	Indicación
•	Bloqueo AE/AF
ISO400	Número ISO
125	Velocidad de obturación
F3,5	Valor de abertura
+2,0EV	Valor de exposición
[]	Indicador del cuadro del visor de rango AF
Espera	Grabación de una película/Puesta en espera de una película
0:12	Tiempo de grabación (min:s)

ES

## 3

Visualización	Indicación
<b>1</b> 02	Carpeta de grabación
96	Número de imágenes que se pueden grabar
100Min (min)	Tiempo que se puede grabar
	Soporte de grabación/ reproducción (tarjeta de memoria, memoria interna)
<b>③</b>	Reducción del efecto ojos rojos
<b>(3)</b>	Modo de flash
4 •	Carga del flash

## 4

Visualización	Indicación
<b>5</b> 10	Autodisparador
[ ] FOFF	Detección de cara
	Ráfaga
	Cuadro del visor de rango AF
+	Cruz filial de la medición de punto

# Número de imágenes fijas y tiempo grabable de películas

## Imágenes fijas

DSC-S2100

(Unidades: Imágenes)

Capacidad	Memoria interna	Tarjeta de memoria formateada con est cámara			n esta	
Tamaño	Aprox. 6 MB	2 GB	4 GB	8 GB	16 GB	32 GB
12 M	1	395	790	1600	3200	6400
8 M	1	580	1170	2350	4700	9400
5 M	2	710	1420	2900	5850	11700
VGA	28	9650	19300	38600	77200	154400
16:9(9 M)	1	533	1060	2150	4300	8600
16:9(2 M)	5	1800	3700	7500	15000	30000

#### DSC-S2000

(Unidades: Imágenes)

Capacidad	Memoria interna	Tarjeta de memoria formateada con esta cámara				n esta
Tamaño	Aprox. 6 MB	2 GB	4 GB	8 GB	16 GB	32 GB
10 M	1	470	940	1900	3800	7600
5 M	2	710	1420	2900	5850	11700
VGA	28	9650	19300	38600	77200	154400
16:9(7 M)	1	600	1200	2450	5000	10000
16:9(2 M)	5	1800	3700	7500	15000	30000

#### Notas

- El número de imágenes fijas podrá variar dependiendo de las condiciones de la toma y el soporte de grabación.
- Cuando el número de imágenes restantes que pueden tomarse es superior a 99 999, aparece el indicador ">99 999".
- ES Cuando se reproduzca en esta cámara una imagen tomada con otras cámaras, es posible que la imagen no aparezca en el tamaño de imagen real.

#### **■** Películas

La tabla de abajo muestra los tiempos de grabación máximos aproximados. Estos son los tiempos totales para todos los archivos de película.

(Unidades: h (hora): min (minuto): s (segundo))

Capacidad	Memoria interna	Tarjeta de memoria formateada con esta cámara				
	interna	Calliala				
Tamaño	Aprox. 6 MB	2 GB	4 GB	8 GB	16 GB	32 GB
VGA	0:00:03	0:27:20	0:54:40	1:49:20	3:38:40	7:17:20
QVGA	0:00:10	1:23:40	2:45:00	5:35:00	11:18:00	22:36:00

#### Notas

- El tamaño de archivo de película que se puede grabar es de hasta aprox. 2 GB para cada archivo. Si el tamaño de archivo alcanza aprox. 2 GB la cámara detendrá la grabación de película automáticamente.
- El tiempo de grabación podrá variar dependiendo de las condiciones de la toma y del soporte de grabación.
- La cámara no admite grabaciones HD ni reproducciones para películas.

#### **Precauciones**

### No utilice o almacene la cámara en los siguientes lugares

- En un lugar muy caluroso, frío o húmedo
   En lugares tales como en un automóvil aparcado al sol, es posible que el cuerpo de la cámara se deforme y esto podrá ocasionar un mal funcionamiento.
- Bajo la luz solar directa o cerca de una estufa
   El cuerpo de la cámara podrá decolorarse o deformarse, y esto podrá ocasionar un mal funcionamiento.
- · En un lugar expuesto a vibración basculante
- · Cerca de un lugar magnético fuerte
- · En lugares arenosos o polvorientos

Tenga cuidado de no dejar entrar dentro de la cámara arena o polvo. Esto podrá ocasionar un mal funcionamiento en la cámara, y en algunos casos este mal funcionamiento no podrá repararse.

#### Acerca del transporte

No se siente en una silla u otro lugar con la cámara en el bolsillo trasero de sus pantalones o falda, porque podrá ocasionar un mal funcionamiento de la cámara o dañarla.

#### Acerca de las pilas

- Evite un manejo brusco, desmontaje, modificación, golpes físicos, o impactos tales como golpear, dejar caer o pisar las pilas.
- · No utilice una pila deformada o dañada.
- No mezcle una pila usada junto con una pila nueva ni diferentes tipos de pilas.
- Extraiga las pilas de la cámara cuando no vaya a utilizar la cámara durante periodos de tiempo largos, o cuando las pilas estén agotadas.

#### Acerca de la limpieza

#### Limpieza de la pantalla LCD

Limpie la superficie de la pantalla con un kit de limpieza de LCD (se vende por separado) para quitar las huellas dactilares, el polvo, etc.

#### Limpieza del objetivo

Limpie el objetivo con un paño suave para quitar huellas dactilares, polvo, etc.

#### Limpieza de la superficie de la cámara

Limpie la superficie de la cámara con un paño suave ligeramente humedecido con agua, después limpie la superficie con un paño seco. Para evitar dañar el acabado o la envoltura:

- No exponga la cámara a productos químicos tales como diluyente, bencina,
- alcohol, paños desechables, repelente de insectos, bronceador o insecticida.
- No toque la cámara con nada de lo de arriba en su mano.
- No deje la cámara en contacto con goma o vinilo durante largo tiempo.

#### Acerca de la temperatura de funcionamiento

Su cámara está diseñada para ser utilizada a temperaturas de entre 0 °C y 40 °C No se recomienda tomar imágenes en lugares extremadamente cálidos o fríos que excedan esta gama.

#### Acerca de la batería interna de respaldo recargable

Esta cámara tiene una batería recargable interna para mantener la fecha y hora y otros ajustes independientemente de si la alimentación está conectada o desconectada.

Esta batería recargable se carga continuamente siempre que está utilizando la cámara. Sin embargo, si utiliza la cámara solamente durante cortos períodos, se descargará gradualmente, y si no la utiliza en absoluto durante un mes se descargará completamente. En este caso, asegúrese de cargar esta batería recargable antes de utilizar la cámara.

Sin embargo, aunque esta batería recargable no esté cargada, aún podrá utilizar la cámara, pero la fecha y la hora no se indicarán.

#### Método de carga de la batería interna de respaldo recargable

Inserte pilas con suficiente potencia restante en la cámara, y después deje la cámara durante 24 h (hora) o más con la alimentación desconectada.

## **Especificaciones**

#### Cámara

#### [Sistema]

Dispositivo de imagen:

DSC-S2100: Filtros mosaico de colores primarios rojo, verde, azul (RGB) de 7,79 mm (tipo 1/2,3) DSC-S2000: Filtros mosaico de colores primarios rojo, verde, azul (RGB) de 7,70 mm (tipo 1/2,3)

Número total de píxeles de la cámara: DSC-S2100: Aprox.

12,4 Megapíxeles

DSC-S2000: Aprox. 10,3 Megapíxeles

Número efectivo de píxeles de la cámara:

DSC-S2100: Aprox.

12,1 Megapíxeles DSC-S2000: Aprox.

10,1 Megapíxeles

Objetivo: Objetivo zoom 3×

f = 6,2 mm - 18,6 mm (35 mm - 105 mm (equivalente a película de 35 mm))

F3,1 (W) - F5,6 (T)

Control de exposición: Exposición automática, Selección de escena (8 modos)

Balance del blanco: Automático, Luz diurna, Nublado, Fluorescente 1/2/3, Incandescente, Flash

Intervalo de grabación para el modo Ráfaga: Aprox. 1 s (segundo) Formato de archivo:

Imágenes fijas: Compatible con JPEG (DCF Ver. 2,0, Exif Ver. 2,21, MPF Baseline), compatible con DPOF

Películas: AVI (Motion JPEG)

Soporte de grabación: Memoria interna (aprox. 6 MB), "Memory Stick Duo", tarjeta de memoria SD, tarjeta de memoria SDHC

Flash: Alcance del flash (sensibilidad ISO (Índice de exposición recomendado) ajustado a Auto): aprox. 0,5 m a 3,3 m (W)/ aprox. 0,5 m a 1,8 m (T)

#### [Conectores de entrada y salida]

Comunicación USB: Hi-Speed USB (compatible con USB 2.0)

#### [Pantalla LCD]

Panel LCD:

DSC-S2100: 7,5 cm (tipo 3,0) DSC-S2000: 6,2 cm (tipo 2,5) Unidad TFT

Número total de puntos: 230 400  $(960 \times 240)$  puntos

#### [Alimentación, general]

Alimentación: Baterías alcalinas LR6 (tamaño AA) (2), cc 3 V
Baterías de hidruro de metal de níquel HR15/51:HR6 (tamaño AA) (2) (se vende por separado), cc 2,4 V
Oxy Nickel Primary Battery ZR6 (tamaño AA) (2) (se vende por separado), cc 3 V

Consumo (durante la toma de imagen): 1 0 W

Temperatura de funcionamiento:  $0~^{\circ}\text{C}$  a  $40~^{\circ}\text{C}$ 

Temperatura de almacenamiento: -20 °C a +60 °C

Dimensiones: 97,6×61,0×27,2 mm (An/Al/Pr, excluyendo los salientes)

Peso:

DSC-S2100: Aprox. 184 g DSC-S2000: Aprox. 173 g (incluyendo dos pilas y tarjeta de memoria)

Micrófono: Monoaural Zumbador Exif Print: Compatible PRINT Image Matching III:

Compatible

PictBridge: Compatible

El diseño y las especificaciones están sujetos a cambios sin previo aviso.

#### Marcas comerciales

 Las marcas siguientes son marcas comerciales de Sony Corporation.

Cyber-shot, "Cyber-shot",
"Memory Stick", "..., "Memory
Stick PRO", MEMDRY 5TICK PRO,
"Memory Stick Duo",
MEMDRY 5TICK DUO, "Memory
Stick PRO Duo",

MEMORY STICK PRO Duo, "Memory Stick PRO-HG Duo", Memory Stick PRO-HG Duo", Memory STICK PRO-HG Duo, "Memory

Stick Micro", "MagicGate",

#### MAGICGATE

- Microsoft, Windows, DirectX y Windows Vista son marcas comerciales o bien marcas comerciales registradas de Microsoft Corporation en los Estados Unidos de América y/u otros países.
- Macintosh y Mac OS son marcas comerciales o marcas comerciales registradas de Apple Inc.
- Intel, y Pentium son marcas comerciales o marcas comerciales registradas de Intel Corporation.
- El logotipo de SDHC es una marca comercial.



- MultiMediaCard es una marca comercial de la MultiMediaCard Association.
- Adobe y Reader son marcas comerciales o bien marcas comerciales registradas de Adobe Systems Incorporated en los Estados Unidos y/u otros países.

ES

 Además, los nombres de sistemas y productos utilizados en este manual son, en general, marcas comerciales o marcas comerciales registradas de sus respectivos desarrolladores o fabricantes. Sin embargo, las marcas <sup>TM</sup> o ® no se utilizan en todos los casos en este manual.

En la página Web de atención al cliente puede encontrar información adicional sobre este producto y respuesta a las preguntas hechas con más frecuencia.

## http://www.sony.net/

Impreso en papel reciclado en un 70% o más utilizando tinta hecha con aceite vegetal exento de compuesto orgánico volátil (COV).